


COMPANY LOGO	Business Name Area: Plant #1
Procedure No.	PPE Required for this task: @@ @@ @@ @@ Safety Notes –Risk Assessment ###

Connecting rod links manufacture

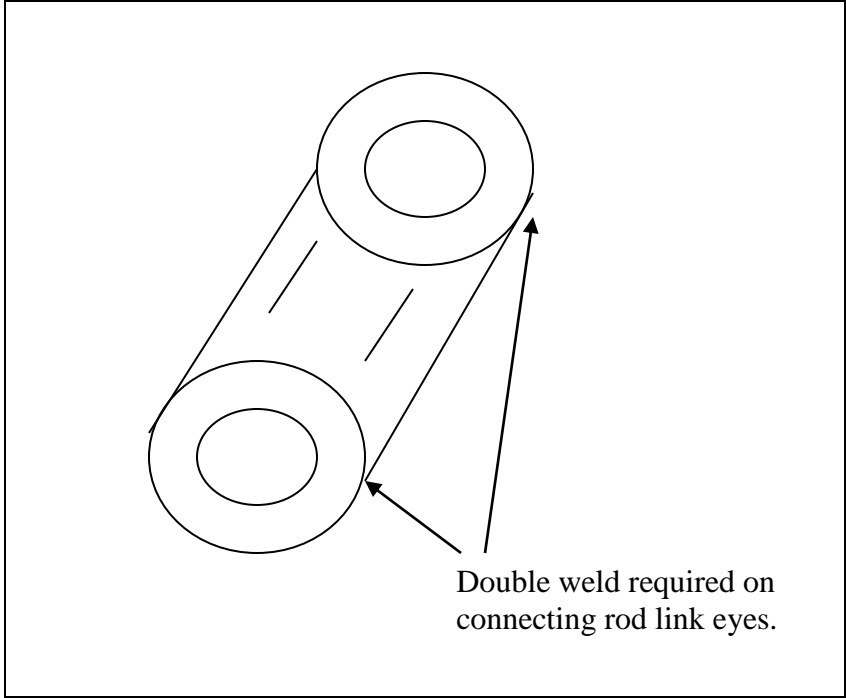

Double welds required due to excessive wear failure at customer sites.

Written By: *****	Checked By: *****	Authorised By: *****
-------------------	-------------------	----------------------